

Sowing machine installation

Install the handle

1. The machine has been assembled and installed. Just install the handle.
2. Insert the handle into the corresponding hole and tighten the screw.
3. Finish.



Install the sowing box

1. The end of sowing box is mounted to the pressure plate without press down the fixed pressure plate.
2. After step 1, the front of sowing box as shown in the picture, the pin and mounting hole are in the same position.
3. Press the sowing box with the hand, and see that the pin in step 2 is completely pressed into the bottom of the sowing box, and the gear should bite with the sprocket.



Remove the sowing box

1. Press down pressure plate shrapnel.
2. Pull back the box to pull the pin out of the mounting hole.
3. Take out the sowing box.



The use of sowing machine

Change the sowing wheel

1. The machine has been assembled and installed. Just install the handle.
2. Insert the handle into the corresponding hole and tighten the screw.
3. Finish



Adjust row space

1. Release the screw so that it can be moved around.
2. Adjust to the required distance.
3. After adjustment, tighten the screws.



Adjust the depth of sowing

1. Loosen the top screw.
2. Press depth adjustment lever.
3. Tighten the top screw.



Plant space adjustment method

Adjust the plant spacing

1. Release the screw and remove the protective cover.
2. Release the sprocket screw and take out the sprocket.
3. Remove the spring plate.
4. Remove the front and rear sprockets.
5. According to the baseline replace the required sprocket and install the spring.
6. Install the protective cover and tighten the screws.





the baseline of the on-demand spacing (cm)
Space can be variable according to different lands and speed

Chain gear combination numerical table												
sowing wheel side	14	14	13	13	11	11	10	11	10	10	9	
driving wheel side	9	10	10	11	10	11	11	13	13	14	14	
sowing wheel holes number	3 ↑	51	46	43	39	36	33	30	28	25	23	21
	4 ↑	38	35	32	29	27	25	23	21	19	18	16
	6 ↑	26	23	21	19	18	16	15	14	13	12	11
	8 ↑	19	17	16	15	14	13	12	11	10	9	8
	10 ↑	15	14	13	12	11	10	9	8	8	7	6
	12 ↑	13	12	11	10	9	8	7	7	6	6	5
	20 ↑	8	7	7	6	6	5	5	4	4	4	3
30 ↑	5	5	4	4	4	3	3	3	3	2	2	

According to change seeding wheel can plant different seeds by one model

● Adjust plant space methods: according to random supporting link gears to adjust space, refer to the baseline of the on-demand spacing, for example, sowing wheel side choose gear 11, driving wheel side choose gear 11, when sowing wheel is 3 holes, plant space is 33cm




Rape, cabbage can sow 1.2.3 pcs or more, plant spacing 2-51cm

Water spinach can sow 1.2.3 pcs, plant spacing 11-26cm



Spinach, crown daisy can sow 1-2 pcs, plant spacing 5-13cm

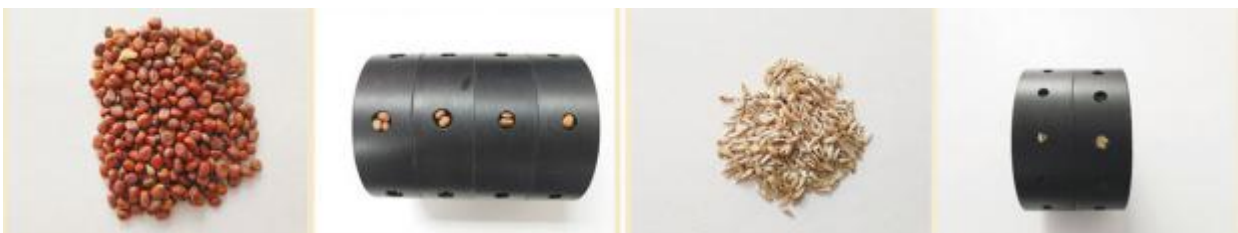

Radish can sow 1-3 pcs or more, plant spacing 11-26cm

Lettuce can sow 2-3 pcs or more, plant spacing 5-26cm



Caraway can sow 2-3pcs, plant spacing 2-6cm

Celery can sow 3-4pcs, plant spacing 5-13cm



Chives can sow 5.7 pcs, OEM, plant spacing 11-26cm

Pea can sow 1 pcs, plant spacing 5-26cm

Daily maintenance

1. 60 hours fill little butter.
2. 80 hours fill little butter.
3. each 20 hours add butter to the screw.



4. Each 40 hours add oil to the chain.
5. When stored each 100 hours or in the long term, brush anti-rust oil on surface.
6. Check when work, and adjust it down to prevent leakage after wear.

Note: be sure to maintain the machine at the prescribed time.



Postadress:

TRÄDGÅRDSTEKNIK AB
Helsingborgsvägen 578, Varalöv
262 96 ÄNGELHOLM

Telefon : 0431-222 90
Bg.nr : 5743-7980
Org.nr : 556409-6120

URL:

www.tradgardsteknik.se
E-postadress:
info@tradgardsteknik.se